HTP1-13-5-L-HTP

BMW GSW PD NERF HEAD GUARD



Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail installation@happy-trail.com.


Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list on the final of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

Step 1

Hold the guard on the PD Nerf and thread 3 M8x20 BHCS into the 3 mounting clamps as shown. See Fig 1.

Repeat on other side.

Fig 1

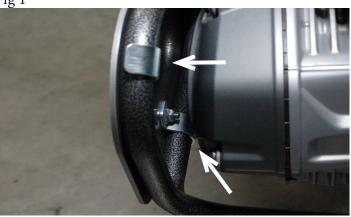

Step 2

Using a 5 mm Allen wrench, tighten all bolts into the attached locknuts on the clamps.



Recommended Tools:

5mm Allen wrench



Hardware List:

(2) Cylinder Guard Plates(6) Mounting clamps(6) M8x20 BHCS