



**HAPPY-TRAIL.COM**

*Dual Sport & Adventure Touring Specialists*

Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail [installation@happy-trail.com](mailto:installation@happy-trail.com).

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list at the bottom of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

### Step 1


Our aluminum tail plate mounts directly to the OEM tail rack using existing holes in the OEM rack.

Place (4) M8 Flat Washers on the (4) M820B bolts and insert them through the existing predrilled holes in our tail plate at the four positions indicated in Fig 1.

Place another M8 Flat Washer on the bottom back two holes and secure with an M8N nylock nut.

For the front two holes, place just the M8N nylock nut into the plastic hex slots on the bottom of the OEM rack and secure.

Fig 1

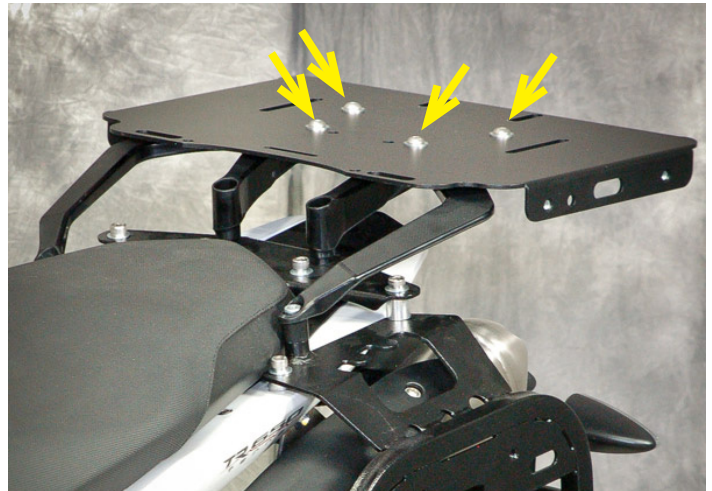

### Recommended Tools:

5mm Allen (hex) wrench  
13mm wrench/socket

**NOTE: Although our tail plate provides a larger surface area for securing items to the tail rack, please do not exceed OEM specified weight limits for the plastic rack.**

### Hardware List:

(1) Predrilled T-3 Tail Plate  
(4) M820B Button Head Bolts  
(6) M8 Flat Washers  
(4) M8N Nylock Nuts

