


KAW VERSYS ENGINE GUARD/SKID PLATE HTP4-9-4 & HTP4-9-5



KAWASAKI
Versys Engine Guard/Skid Plate
MOUNTING INSTRUCTIONS

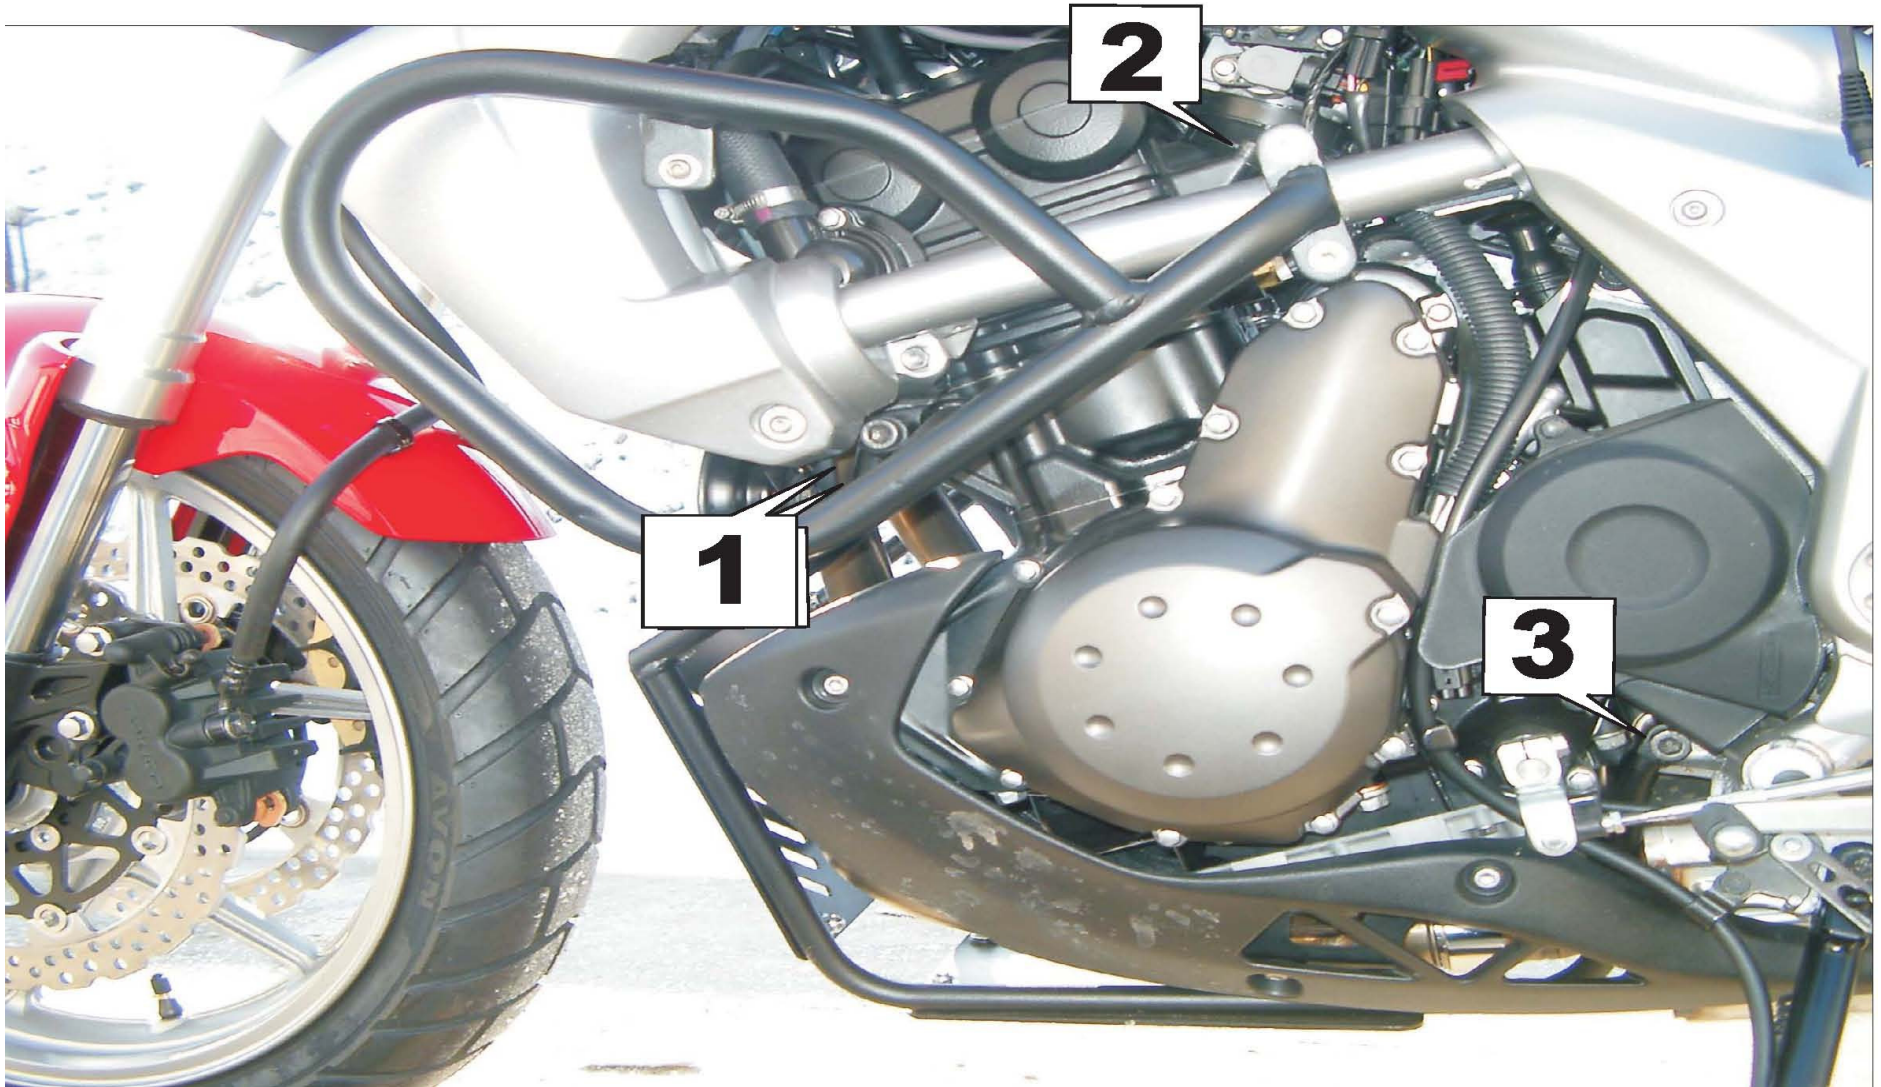

Remove only one bolt at a time out of motorcycle

ENGINE GUARD

PUT ALL PARTS TOGETHER LOOSELY TIGHTEN WHEN ALL TOGETHER loosely Starting with the engine guard. remove engine bolt @ location 1. Place engine guard up to bike use 6X70 bolts, washers, nuts & clamps to attach guard to the frame @ location 2. Now using the 10X90 bolt, nut & washer (spacer if not running skid plate) attach the engine guard @ location 1. The right engine guard attaches the same way except for the a spacer is used between the frame & engine guard (unless running the skid plate) Next; attaching the cross over. The cross over will only work one way. there should be a tag attached to the cross over that identifies which side it goes to. Slip cross over through motorcycle engine compartment @ location 4, use the 6X16 bolts, nuts & washers to attach cross over to engine guard. Tighten all bolts. The job is completed. **left side location 1 does not mount directly to the frame,**

BOLT LIST

2	6X16mm bolts
4	6X70mm bolt
10	1/4" washers
6	6mm nuts
1	10X90 bolt
1	10X130mm bolt
2	10mm nuts
4	10mm washers
2	1" spacers 1/2" Bore
2	Clamp pair

SKID PLATE

PUT ALL PARTS TOGETHER LOOSELY TIGHTEN WHEN ALL TOGETHER DO NOT TIGHTEN YET! TIGHTEN DOWN! Remove the left & right side stock plastic engine guards. place left & right tube rails up to the mounts that bolt was removed from, place the 10X220mm bolt & nut through the mount , remove the bolt, place tube rail up to mount that bolt was removed from, insert bolt & nut through remove the bolt, place tube rail up to mount that bolt was removed from, insert bolt & nut, tighten down location#1&3 Place belly pan on bottom, mark the four holes, drill with a 1/4" drill bit, attach belly pan to tube rails using the 4-6X16mm bolts, metal washers, rubber washers (place rubber washers between the belly pan & tube rails to reduce vibration) Do the same steps to attach the front shield. Make sure all bolts are tight. **Remove rear engine bolt @ location # 3. Next @ location#1 on left side Next @ location#1 on the right side, Next, installing the belly pan and front shield.**

BOLT LIST

8	6X16 BH bolts
8	1/4" washers
8	1/4" rubber washers
8	6mm Nylock nuts
1	10X220mm bolt
1	10X90 bolt
1	10X130 bolt
3	10mm nuts