



**HAPPY-TRAIL.COM**  
Dual Sport & Adventure Touring Specialists

Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail [installation@happy-trail.com](mailto:installation@happy-trail.com).

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list on the final page of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

### Step 1

Remove three mounting bolts and remove OEM tail rack. See Fig 1.


Fig 1



### Step 2

Remove 2 mounting bolts and remove OEM sub rack. See Fig 2.


Fig 2

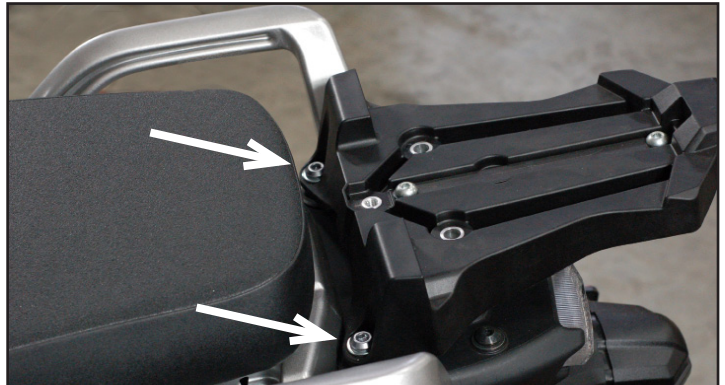

### Step 3

Place two .750 OD x .500 ID x 1.250 L Aluminum spacers in the holes at the forward mounting locations. See Fig 3.


Fig 3

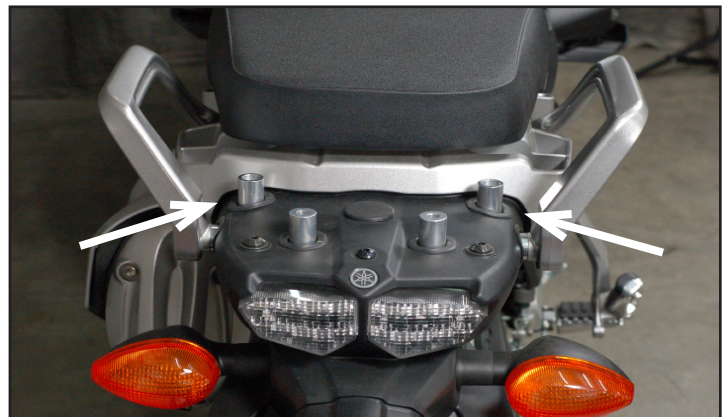

**Step 4**

Place two .750 OD x .319 ID x 1.000 L Aluminum spacers in the holes at the rear mounting locations. See Fig 4.

Fig 4

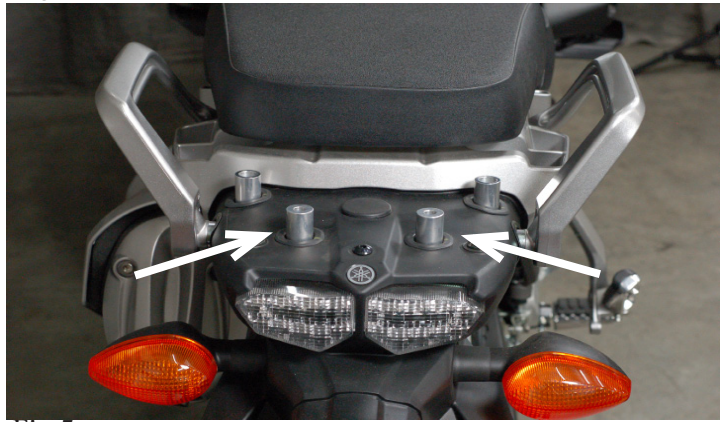

**Step 5**

Install the Tail Plate using two M855B bolts with flat washers in the forward holes, and two M850B bolts with flat washers in the rear holes. See Fig 5

Fig 5



Tighten the M8 bolts to 18 ft/lbs.

**Recommended Tools:**

- 5 mm Allen wrench
- 6 mm Allen wrench




**Parts List:**

- 1 Tail Plate




# YAMAHA SUPER TENERE TAIL PLATE

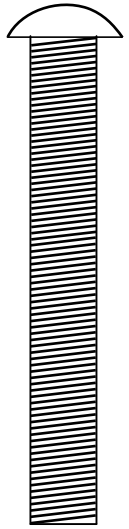


M850B

X2

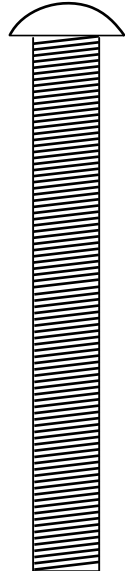


M855B

X2

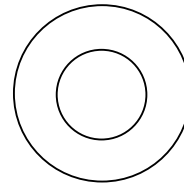



8mm FW

X4

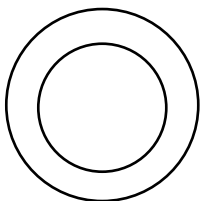

OD3/4, ID .500, L 1 1/4 Spacer

X2

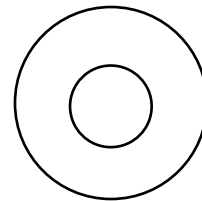

OD3/4, ID .319, L 1 Spacer

X2

