

HTPO-0-4A CLAMP ON HIGHWAY PEG



Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail installation@happy-trail.com.

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list on page 2 of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

Step 1

Note: The black plate can be mounted using either vertical mounting slot, or even flipped horizontally to provide a range of foot peg locations on the bike.

Begin by placing a 5/16" flat washer on two of the M865S bolts. Slide the bolts through the selected holes in the black mounting plate, and then through the non-slotted 1" frame clamp as shown in Fig 1.

Fig 1



Step 2

Select a location on the engine guard to mount the adjustable highway peg. Place the bolts, mounting plate and frame clamp, which were assembled during Step 1, onto the frame in your chosen mounting location. Example location shown in Fig 2.

Fig 2



Step 3

Place the slotted frame clamp on the back side of the frame and on to the bolts of the assembly from step 2.

Fig 3



HTPO-0-4A CLAMP ON HIGHWAY PEG

Step 4

Place an M8 Nyloc nut into the slots on the clamp and thread the M865S bolts into the nuts finger-tight. See Fig. 4. Then align the plate parallel to the motorcycle, and shown in Fig. 2 above, and tighten the M865S bolts to 18 ft/lbs.

Fig 4



Step 5

Finally, bolt the removable passenger peg into the long slot at the front of the black mounting plate. Insert the M1225B bolt through the hole in the foot peg and then through the black mounting plate. Place a 7/16" flat washer on the bolt and thread an M12 Nyloc nut onto the bolt. Check to ensure that the foot peg hinges upward.

Fig 5



Adjust the foot peg to a comfortable position and tighten all bolts down to 18 ft/lbs.

Repeat steps 1-5 on both highway pegs.

Hardware List:

- 2 highway pegs
- 2 powder coated mounting plates

Recommended Tools:


- 6mm Allen Wrench
- 8mm Allen Wrench
- 19mm Box End Wrench



Happy Trails Products


12/7/2021
Rev 5
JH

Adjustable universal clamp on highway peg HTP0-0-4A

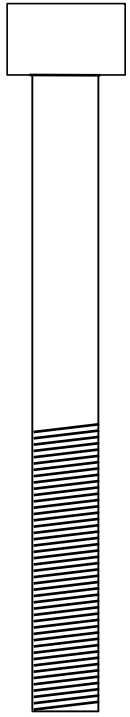


X4

M865S

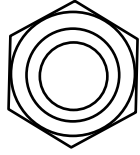


M8N

X4

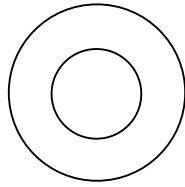


5/16" FW

X4

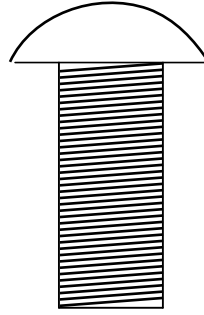


M1225

X2

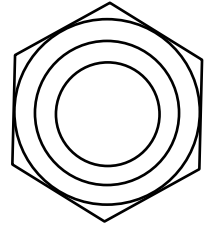


M12N

X2

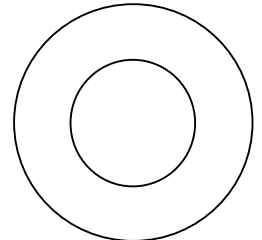


12mm FW

X2

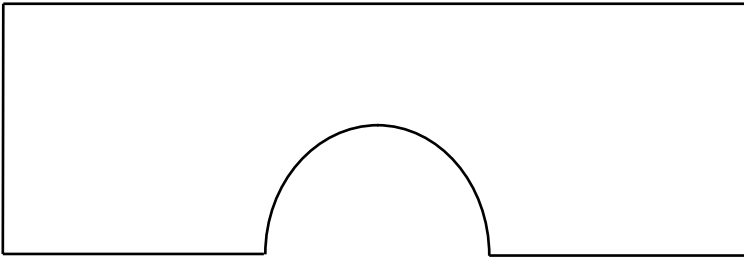

1" frame clamp X2

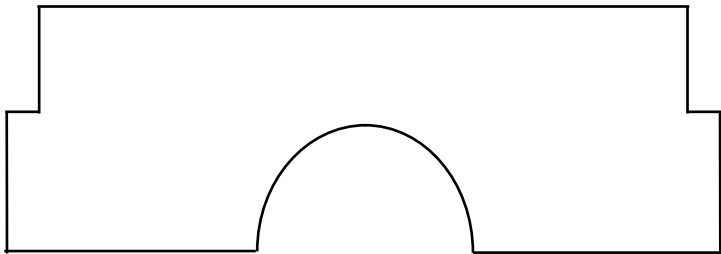

1" slotted frame clamp X2

