



Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail [installation@happy-trail.com](mailto:installation@happy-trail.com).

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list at the bottom of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

**Step 1**

Using an 8mm socket, remove the (2) bolts in the center of the OEM tail plate. See Fig 1.


Fig 1



**Step 2**

Using the 1/4" drill bit included, drill from the top all the way through the mounting holes and subframe tube. Insert the (2) M6x65 SHCS bolts through the hole and secure under the fender with (2) Flat Washers and (2) M6 lock nuts. See Fig 2.

Fig 2

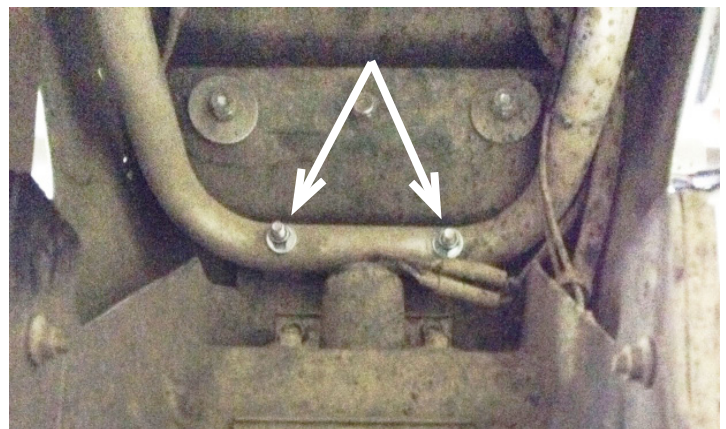

Tighten the nuts to 9 ft/lbs.

**Recommended Tools:**

- 1/4" or 3/8" Drill motor
- 5 mm Allen (hex) wrench
- 10 mm wrench



**Hardware List:**

- (1) 1/4" drill bit
- (2) M6x65 SHCS bolts
- (2) M6 Flat Washers
- (2) M6 Nylock Nuts