



**HAPPY-TRAIL.COM**  
Dual Sport & Adventure Touring Specialists

Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail support@happy-trail.com.


Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list at the end of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

### Step 1

Set the hardware from the kit shown in Fig 1 along with the Hwy Peg Bar on a flat surface.

You will need a 19mm open end wrench and 8mm Hex (Allen) wrench to install the pegs on the bar.

Fig 1

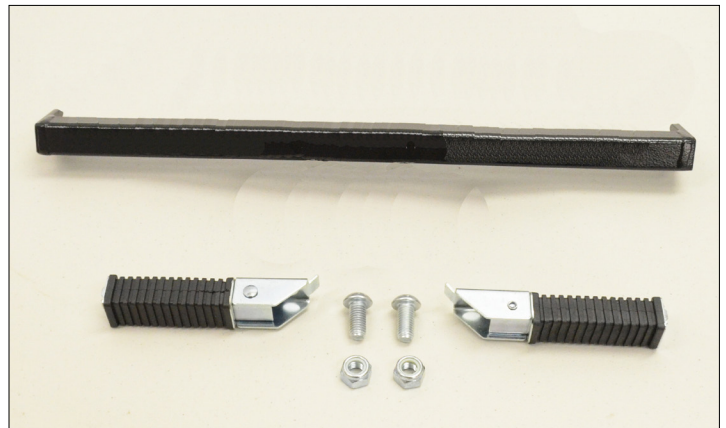

### Step 2

Place the foot peg on the Hwy Bar such that the notch in the tab at the end of the bar matches up with the tab at the end of the foot peg.

Insert the M12x25 bolt through the foot peg and hwy bar tab and secure on with the M12 nut as shown in Fig 2. Repeat for other side.

Torque bolt to 33 ft/lbs.

Fig 2



### Step 3


Example installation location on front of skid plate.

Note: Predrilled center to center hole spacings are 2.5” and 4”

Holes may need to be drilled in the skid plate if mounting directly to a skid plate, or additional holes can be drilled into the Highway Peg Bar to match existing skid plate or other bike bolt locations.

The part is installed incorrectly if it hits the fender. The installer is responsible to make sure all parts work properly when installed.

Fig 3

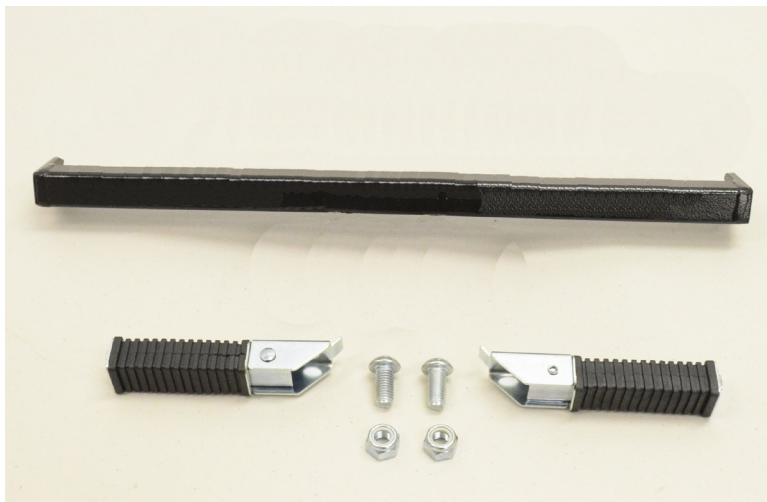

### Recommended Tools:


8mm Allen (hex) Wrench  
6mm Allen (hex) Wrench  
5mm Allen (hex) Wrench  
19mm Open End Wrench  
10mm & 13mm Wrench  
Thread locking compound  
Torque wrench  
Drill depending on mount location

### Hardware List:

(1) Universal Hwy Peg Bar  
(2) Foot Peg with bracket  
(1) Bolt Kit  
(1) Instructions




4/7/15  
Rev. 1  
JE

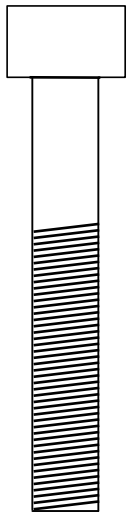


M845S

X2

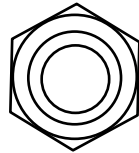


M8N

X2

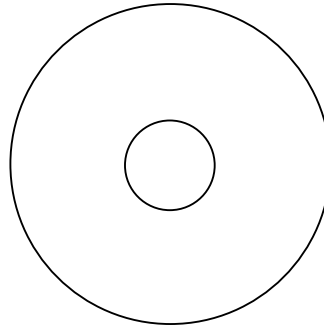


5/16"x1 1/4"  
Fender Washer

X4

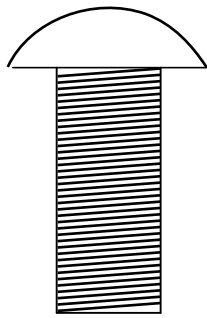

M1225B


X2

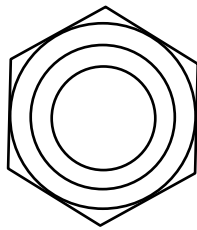

M12N


X2

Used to mount the  
pegs to the bar end  
tabs




M640S

X2

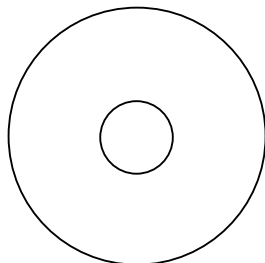

1/4"x1"  
Fender Washer

X2



M6N

X2

6mm Hardware  
Typically used for  
XR650 application.